

Setup Instructions

Waveline Serpentine Display



GENERAL INFORMATION

Thank you for choosing ASAP!

For additional information please feel free to call us at 877-977-5537 or visit our website at www.asapcanopy.com

Our office hours are weekdays 9:00 AM to 6:00 PM EST. If you need assistance over the weekend, please email support@info@asapcanopy.com and one of our staff members will respond as soon as possible.

No tools required

(A) 2x long S shaped poles



(B) 2x long straight poles




(C) 2x straight center support poles



(D) 4x curved corner poles




(E) 1x fabric graphic

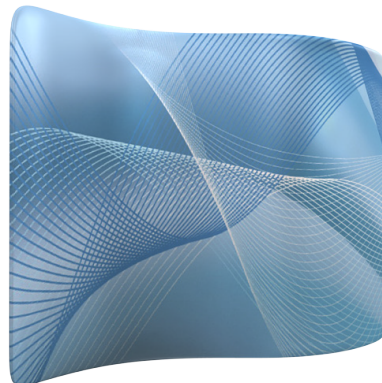


STEP 01

Assemble all the poles (A, B, C).

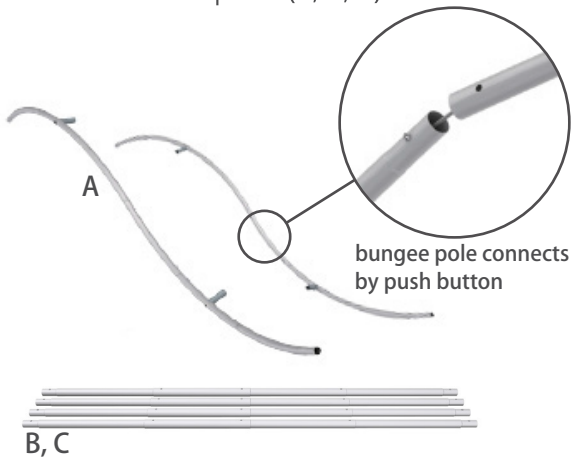


STEP 02

Insert center support poles (C) in center of long S shaped poles (A).

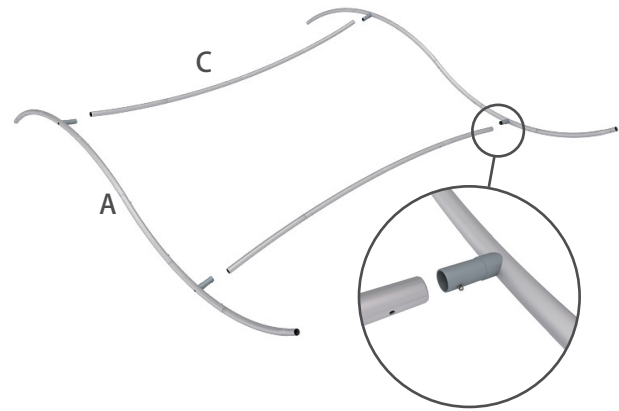


STEP 03

Connect corner poles (D) to long S shaped poles (A) and long straight poles (B) with matching shape codes (connects by push button).

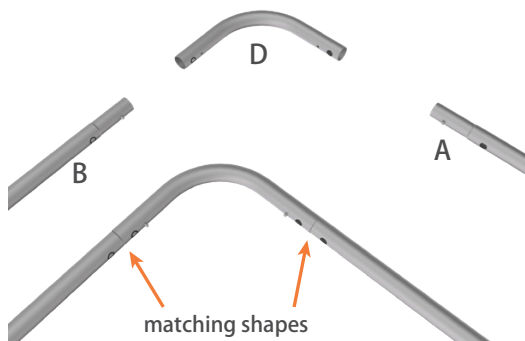


STEP 04

Frame layout.

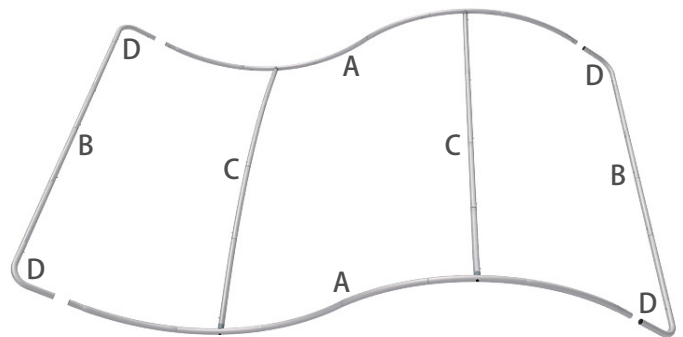

STEP 05

Unzip fabric graphic (E) and lay image face down. Slide fabric onto frame like a pillow case.

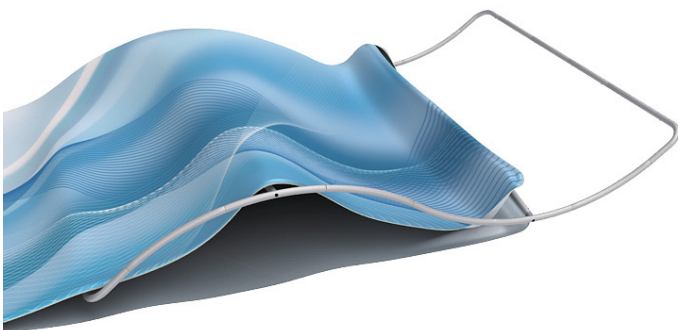


STEP 06

Zip the edge of graphic beyond the center support poles as shown. This will hold the center support poles in place. Zip the remaining side and bottom to meet at the corner.



STEP 07 (OPTIONAL)

To straighten your ASAP frame, grasp one side of the frame with two hands and carefully twist the frame in the opposite direction of the lean. Repeat on each side until the frame is standing straight.

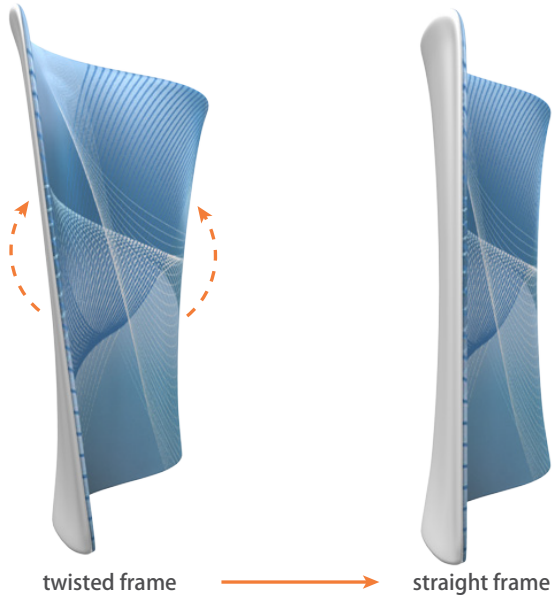

STEP 08 (OPTIONAL)

Position lights as desired and tighten knob to hold in place. **WARNING!** Over tightening may cause damage to fabric image on frame.



STEP 09

Complete.

