Setup Instructions

ASAP Curved Display



GENERAL INFORMATION

Thank you for choosing ASAP!

For additional information please feel free to call us at 877-977-5537 or visit our website at www.asapcanopy.com


Our office hours are weekdays 9:00 AM to 6:00 PM EST. If you need assistance over the weekend, please email support@info@asapcanopy.com and one of our staff members will respond as soon as possible.

TOOLS

No tools required

PARTS

(A) 2x long curved poles



(C) 1x slim straight support pole



(D) 4x curved corner poles




(E) 1x fabric graphic




STEP 01

Assemble the two long curved (A) and three long straight (B, C) poles. The frame is symmetrical so either curved pole can be on top or bottom.

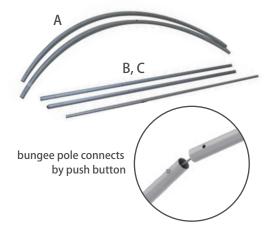


STEP 02

Connect corner poles (D) to curved (A) and straight (B) poles with matching shape codes. Connects by push button.

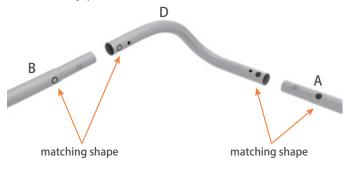


STEP 03

Repeat step 2 for the other three corners.

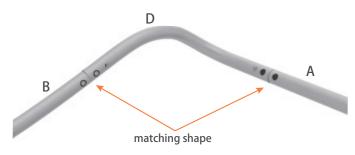


STEP 04

Frame layout.

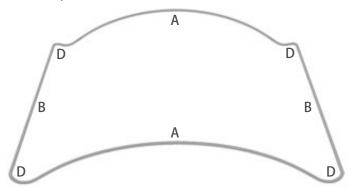

STEP 05

Insert straight support pole (C) in center of long curved poles (A).

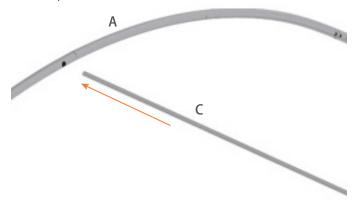


STEP 06

Unzip fabric graphic (E) and lay image face down. Slide fabric onto frame like a pillow case.




STEP 07

Zip the edge of graphic beyond the center support pole as shown. This will hold the center support pole in place. Zip the remaining side and bottom to meet at the corner.

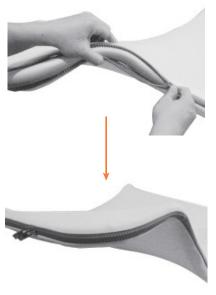

STEP 08 (OPTIONAL)

To straighten your Waveline frame, grasp one side of the frame with two hands and carefully twist the frame in the opposite direction of the lean. Repeat on each side until the frame is standing straight.

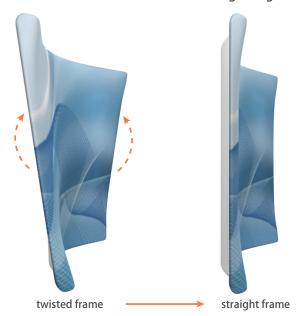

STEP 09 (OPTIONAL)

Position lights as desired and tighten knob to hold in place. WARNING! Over tightening may cause damage to fabric image on frame.



STEP 10

